



PROGRAM PLUS USER GUIDE

Your Blendtec® blender features the most advanced microprocessor available. Nine (9) blending speeds and thirty (30) pre-programmed blend cycles are stored within its memory. With the touch of a few buttons, you determine your blender cycle configuration. Experiment with your recipes and the programs to determine which cycles are best suited for you.

The thirty (30) cycles are shown in the chart located at the end of this fold-out. Note the following:

- Cycles 1-6, labeled light, are for low volume, non frozen product.
- Cycles 7-12, labeled medium, are for medium volume, some ice.
- Cycles 13-17, labeled heavy, are for large volume, frozen fruit, and ice.
- Cycle 18 features a manual ramp control. Simply hold down the button until the desired speed is achieved. Release the button, and the blender will continue at that speed for 50 seconds.
- Cycles 19-24 are 50 second cycles for blending consistently at speed 1, 2, 3, 5, 7, and 9, respectively.
- Cycles 25-30 are specialized pulse buttons that operate at speeds 1, 2, 3, 5, 7 and 9, respectively. Blending will continue until button is released.

You can choose from the three standard profiles (Smoothie, Coffee, and Multipurpose) by rapidly entering the three digit code into the keypad. You may also create your own profile configurations by following the directions in the "Custom Profile" box found in the chart located directly to the right.

Choose from thirty (30) pre-programmed blend cycles found on the chart located on the last page. If you would like, you can create your own cycles for your Blendtec blender. Call Blendtec at 1-800-253-6383 for information or visit www.commercial.blendtec.com to obtain a custom programming kit for your machines.

NOTE: (For 15 and 20 AMP blenders, the maximum speed is Speed 7.)

To select profile, enter the corresponding 3 digit profile code

Custom Profile: 2-4-P


Step 1: Press button program code (2-4-P)
 Step 2: Press button you'd like to program
 Step 3: Choose a cycle from the "Cycle Chart"
 Step 4: Enter the 2-digit program code (found in the box on the right hand side of cycle). If the program is accepted the machine will beep twice.

Example - Program button 1 with cycle 25
 Step 1: Press 2-4-P (Display will read "Button")
 Step 2: Press button 1 (Display will read "Enter Cycle")

Step 3: Find program code for cycle 25
 Step 4: Press P-1

***RESTORE TO FACTORY PROFILE: Press 5-2-1**
 (This restores original blend profile, as received from factory)



NINE (9) BLENDER SPEEDS

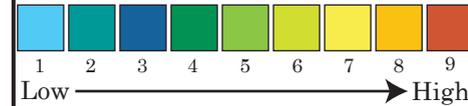





Coffee: 3-P-1



Smoothie: 3-P-2

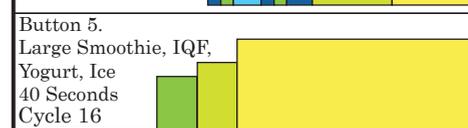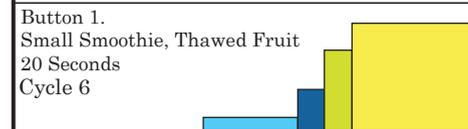


Multipurpose: 3-P-3

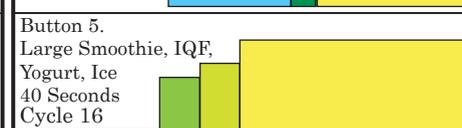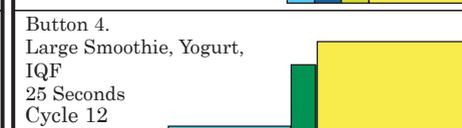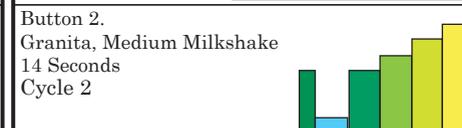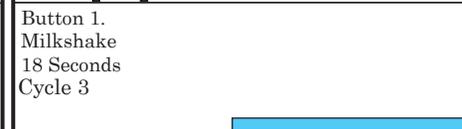


CYCLE CHART: 30 Pre-Programmed Cycles


Light - low volume, non frozen (12oz)

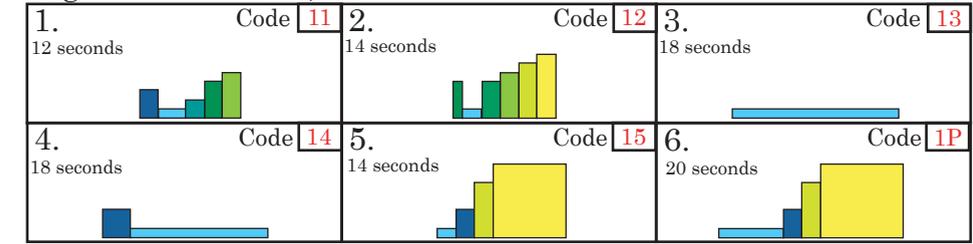


Medium - medium volume, some ice (18oz)

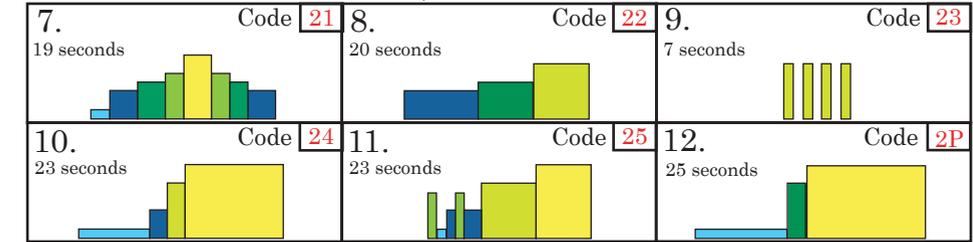

Heavy - heavy volume, frozen fruit and ice (24oz)

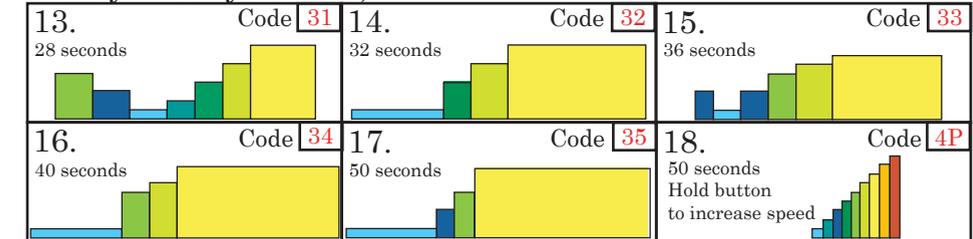

50 Second Cycles - Constant Speed

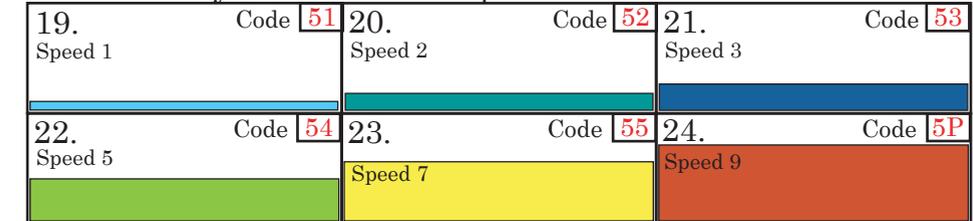

Pulse Cycles

