

# ezBLENDER

## MANUAL



**BRAWN and BRAINS**

 **Blendtec®**



## TABLE OF CONTENTS

<b>Section 1</b> Important Safeguards	2
<b>Section 2</b> Component Overview	4
<b>Section 3</b> Unpacking	6
<b>Section 4</b> Installation	7
<b>Section 5</b> Operating Instructions	7
<b>Section 6</b> Warranty and Service	13

## SECTION 1 – IMPORTANT SAFEGUARDS

**Read all instructions carefully before using your Blendtec machine.**

### 1.1 SAFETY CERTIFICATION

The ez Blender and accessories are certified by ETL to UL standard 763 and by CE Standards.



### 1.2 HEALTH CERTIFICATION

The ez Blender and accessories are certified by NSF International.



### 1.3 AVOID CONTACT WITH MOVING PARTS

- Keep fingers, hands, hair and clothing away from all moving parts.
- Keep all utensils away from the drive socket and blender blades during operation. Metal utensils will damage blades.
- **NEVER** put hands into blender jar.
- **NEVER** place jar into drive socket if blender motor is operating.
- Do not rock the blender when it is operating. Keep the blender jar straight up until the operation is complete.

These precautions will prevent personal injury and/or damage to the blender.

### 1.4 POWER CORD PRECAUTIONS

- Do not operate with a damaged cord or plug.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard.
- Do not let the cord hang over the edge of the work surface.
- Never use an extension cord with the unit.
- Unplug the blender motor before changing blender locations or cleaning.

### 1.5 NEVER ATTEMPT TO REPAIR THE POWER UNIT

Never remove the blender base cover. The blender base does not contain self-adjustable or serviceable parts. All service and adjustments must be made by Blendtec (for international service see a Blendtec qualified service agent). **Removing the cover or attempting to service the blender will void the warranty.**

### 1.6 TURN THE UNIT OFF WHEN NOT IN USE

**1.7 THE 110/120 VOLT RECEPTACLE** FOR EACH POWER UNIT MUST BE PROTECTED BY A SEPARATE 15 AMP CIRCUIT BREAKER OR FUSE.

**Do not use any other electrical equipment on the same circuit**

**as the blender or you risk overloading the circuit and either damaging the blender electronics or blowing the circuit protection.**

### **1.8 NEVER OPERATE IF THE UNIT APPEARS DAMAGED**

If the blender malfunctions call Blendtec Customer Service (for international service see a Blendtec qualified service agent) first. If it is dropped or damaged in any way, return the blender to Blendtec (for international service see a Blendtec qualified service agent) immediately for examination, repair, electrical or mechanical adjustment, or possible replacement.

### **1.9 NEVER OPERATE IN LIQUID**

Do not operate the blender motor in water or any other liquid. Avoid any contact between the motor and water. Deliberate use of machine outdoors in conditions where precipitation is present will void the warranty.

### **1.10 NEVER PUT ITEMS SUCH AS METAL, ROCKS, OR OTHER HARD MATERIALS INTO BLENDER JAR**

Metal utensils and other hard materials are dangerous. They can cause injury or damage. Damage caused by such foreign objects will void the warranty.

### **1.11 NEVER OPERATE USING ATTACHMENTS NOT SOLD BY BLENDTEC**

The use of unauthorized attachments voids the warranty and may cause fire, electric shock, or injury.

### **1.12 ALWAYS SECURE THE BLENDER LID BEFORE STARTING THE MACHINE**

### **1.13 AVOID TOUCHING THE BASE AFTER EXTENSIVE USE**

The drive socket of the blender may become hot after numerous cycles.

### **1.14 BLADES ARE SHARP! HANDLE CAREFULLY**

**1.15 When blending HOT liquids, the clear center portion of the lid acts as a pressure relief to allow steam to escape. Be careful not to come in contact with the steam.**

**SAVE THESE INSTRUCTIONS**

## **SECTION 2: COMPONENT OVERVIEW**

### **2.1 BLENDER BASE**

The blender base consists of the blender motor, touch pad control, and liquid crystal display (LCD) information center. (See Figures 1 and 2.)

- **Blender Base:** Houses the blender motor in a plastic casing. Never remove the plastic casing. Removal of the plastic casing will void the warranty.
- **Touch pad:** Consists of five buttons which contain pre-programmed settings as well as a pulse for selective blender control.
- **LCD Information Center:** When a cycle is completed, the display increments the cumulative cycle for warranty purposes. It also indicates overload or over-temperature conditions.
- **Blender Motor:** This unit is located within the blender base and contains the machinery which runs the blender, including the electric motor, drive train, and computerized control board.

### **2.2 BLENDER JAR ASSEMBLY**


The blender jar assembly consists of the blender jar, blade assembly, and lid. The blender jar assembly integrates these components to ensure consistently blended drinks and greater operator safety.

- **Jar:** Made from a hard material to provide maximum performance as well as clear visibility of blender performance.
- **Blade:** Made from stainless steel, and designed to ensure fast, consistent blending.
- **Lid:** Designed to provide ease of handling and quick removal for high speed operations. Contains a clear center cap which provides pressure relief when blending hot foods. The center cap can be removed when the blender is off in order to add ingredients or liquids.


### **2.5 POWER SPECIFICATIONS**

The ez Blender is certified for use on 110/120 volt circuits and is limited to 13 amps. It is required that this unit be operated with a 15 amp protected circuit.

**Figure 1 - LEFT SIDE VIEW**

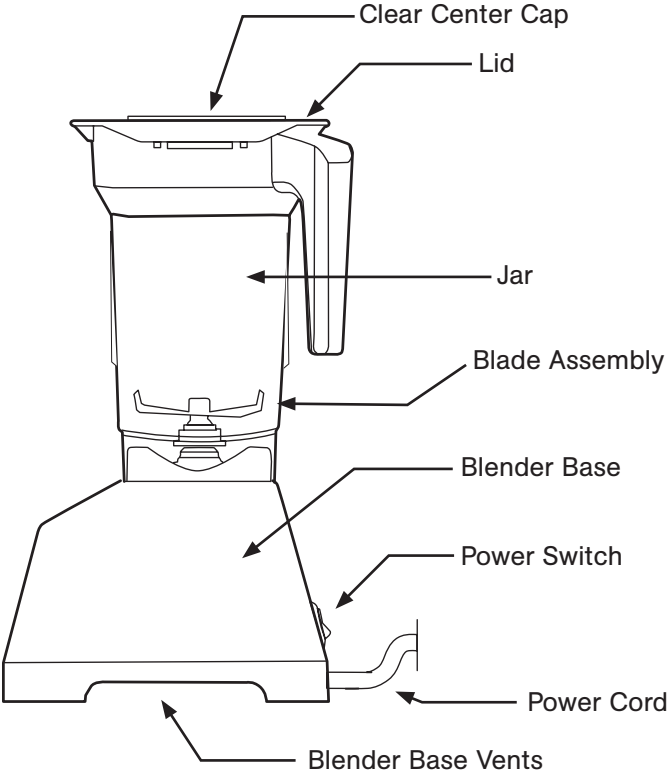

**Figure 2 - FRONT VIEW**

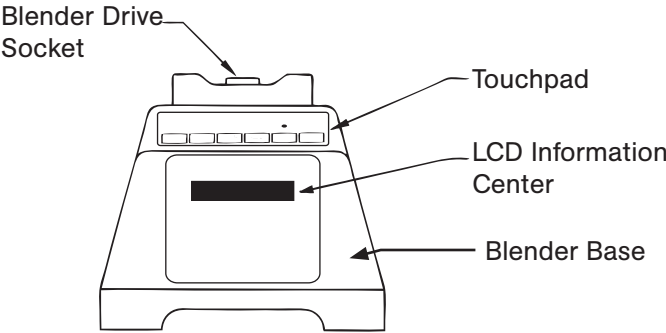

## **SECTION 3: UNPACKING**

Save the two foam inserts and all packaging for future storage or shipping. Save these instructions for future reference.

### **3.1 UNPACKING YOUR BLENDER**

1. You should have received the following items:
  - Blender Base
  - One or more blender jars with lids
2. Remove blender base, blender jars, and lids from carton.
3. Unwind the power cord.
4. Check for and remove any packing material which may have blocked ventilation holes in the blender base.
5. Inspect all items to ensure no damage occurred in shipment.
6. If any damage has occurred contact Blendtec customer service (for international service contact a Blendtec qualified service agent) immediately.

### **3.2 RECORDING YOUR SERIAL NUMBER AND DATE OF SHIPMENT**

Record your blender base serial number and date of purchase in the space below. You will need these when contacting Blendtec for service.

Blender Serial # \_\_\_\_\_

Date of Purchase \_\_\_\_\_

Refer to these whenever service may be needed.



## **SECTION 4: INSTALLATION**

### **4.1 ez Blender Installation**

1. Place blender base on a flat, clean, dry surface.
2. Make sure plug outlet is available within two feet of the blender base.
3. Plug the unit into a 120 volt receptacle with 15 amp protection. Make sure switch is turned off before plugging in. Failure to use a dedicated line may result in damage to the blender. Lack of adequate power causes the motor to overheat (which shortens the life of the blender electronics.) Operating the blender in this manner will void the warranty.
4. Ensure that the blender base vents are unobstructed to allow for proper cooling during use.




## **SECTION 5: OPERATING INSTRUCTIONS**




### **5.1 OPERATIONAL OVERVIEW**

1. Turn on the main power switch located on the back of the blender.
2. Place the properly filled blender jar on the blender base, making sure the jar is seated all the way down and jar lid is secured tightly on the jar
3. Press the touch pad button of your desired blend cycle. (Refer to section 5.2)

5.2 AUTOMATIC CYCLE OPERATION

The following charts show how blend cycles work with time and speed. When the cycle is done it stops automatically.

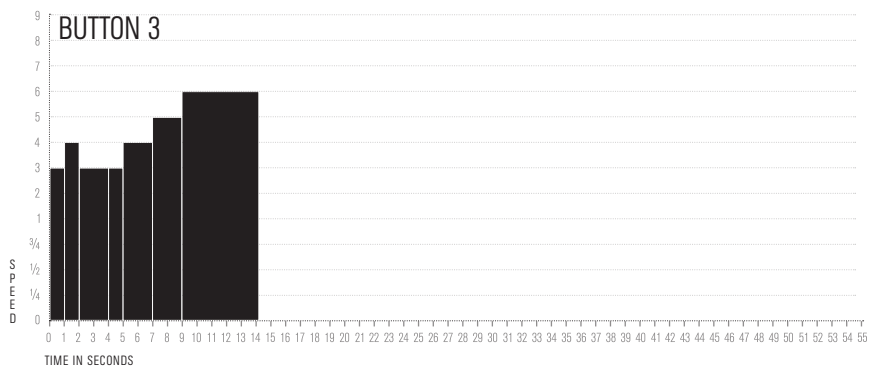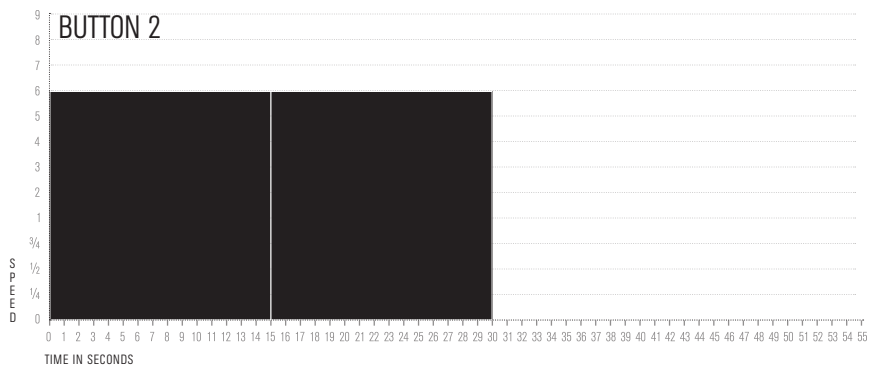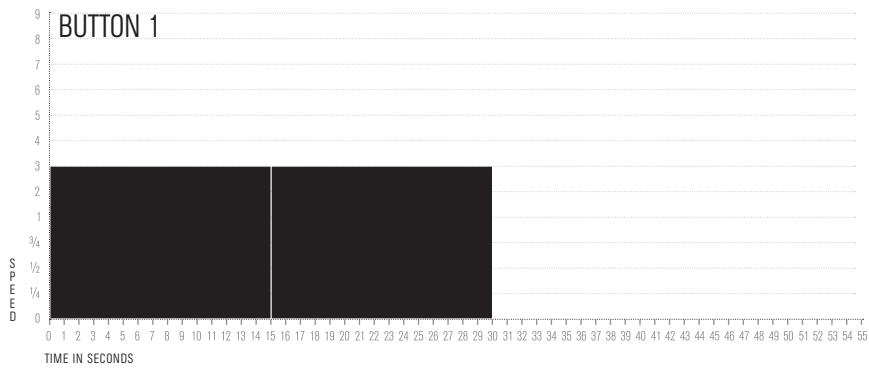

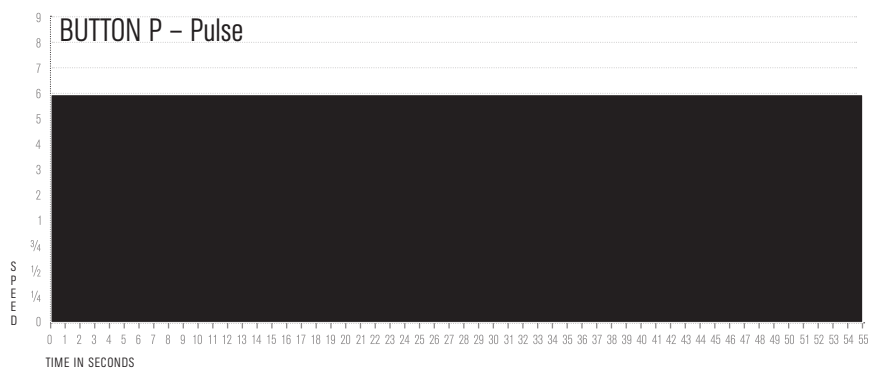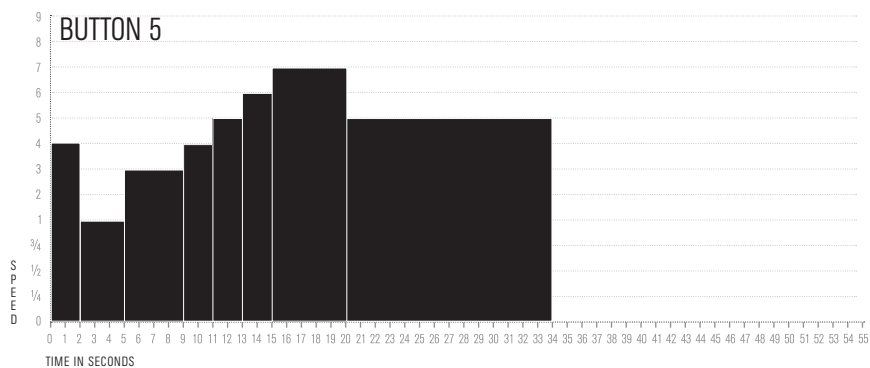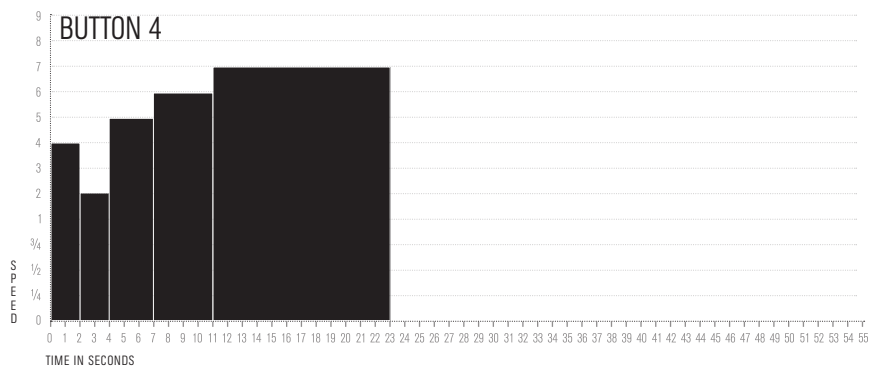

## 5.3 MANUAL OPERATION

**Pulse Button:** Blends mixture at a constant HIGH speed (70 percent power) while button is depressed. Generally this is the last button on the far right of the blender base touch pad and is indicated by the letter "P". This button is normally used for additional blending once a programmed cycle has already been completed.

## 5.4 TROUBLESHOOTING SUGGESTIONS

**BLENDER MOTOR WILL NOT TURN ON:** If the blender motor will not turn on, try the following:

- Make sure the main power switch on the back panel is turned on (see fig. 1, pg. 5).
- Check the house current breaker switch or fuse to make sure it is set to the on position.
- Unplug the power cord, then re-plug it in.
- Determine if the numbers on the liquid crystal display (LCD) indicator are illuminated. If the LCD is off it indicates a lack of power.

A reading of "OVERTEMP" indicates an overheated condition has been detected and the motor has been disabled until the unit cools to operating temperatures. Unplug blender and allow motor to cool for at least 20 minutes.

A reading of "OVERLOAD" indicates an overload on the motor. Turn the blender off for 10 seconds (using the switch) then turn the Blender on again to clear the overload condition. Check the blender jar for blockage.

**BLADE STOPS:** If the overload switch stops the blender, remove the blender jar and carefully check for blockage of the blade. If no blockage is found, replace jar and use the "pulse" button on the touch pad to quickly pulse the blade through the mixture. Once the blade spins freely, a programmed button may be used.

**NOISE LEVEL CHANGES:** If the blender noise level has increased significantly from original levels, determine whether the sound is coming from the blender base or jar.

- **Blender Base:** Check to see if the excess noise is coming from the motor. Remove the jar from the blender base and press cycle number one. Listen to the motor sound without a jar attached. If it is excessively noisy, contact Blendtec customer service (for international service contact a Blendtec qualified service agent).

- Jar: Check to see if the excess noise is coming from the jar. Place the jar back on the blender base. Run the motor for a few seconds using the “P” button. Switch jars back and forth to determine whether the sound changes as different jars are used. If a jar is excessively noisy, or if the blade assembly seems loose or sounds “gravelly” when turned by hand, contact Blendtec customer service (for international service contact a Blendtec qualified service agent).

**BLENDED TEXTURE UNSATISFACTORY:** If the blended texture of product is lumpy or uneven, do the following:

- Make sure the mixture is not cavitating during the cycle. Cavitation is a condition in which the blender blade spins freely in an air pocket within the drink mix because the mix is too cold or too solid. This problem can be corrected by increasing the mix temperature (by reducing ice, increasing liquid and/or insuring that the frozen ingredients used in the recipe are never colder than 10 degrees Fahrenheit or -12 degrees Celsius). When the right combination of ingredients creates the correct temperature, the resulting drink is always smooth, thick and blendable without operator attention.

- Increase cycle time. If the drink is mixing well but has not had enough time for complete blending, try a longer cycle (usually by using a higher button number to start the blender, refer to section 5.2) or touch and hold the “Pulse” button for required extra blending time.

- Make sure the drive shaft on the jar is fully engaged into the drive socket or that the blade is firmly affixed to the drive shaft.

**TRIED EVERYTHING?** If none of the preceding suggestions work, contact Blendtec customer service (for international service contact a Blendtec qualified service agent) for further assistance.

## **5.5 CLEAN BLENDER JAR DAILY**

**1.** Using hot tap water, add 4 cups (1 liter) of water and 1 to 2 drops (7 ml) of liquid dishwashing soap to the blender jar.

**2.** Place the lid tightly onto the jar. Place the blender jar on the blender base and press the pulse button for 15 seconds.

**3.** Rinse with clear water until all soap is rinsed from jar and lid.

**4.** Jars can be stacked to save space if needed.

*NOTE: When washing the blender jar in a dishwasher, the jar should be placed on the top rack. Blender jars are dishwasher safe up to 220 degrees Fahrenheit (104 degrees Celsius).*

## **5.6 LONG-TERM SANITATION OF JAR**

- 1.** Sanitize jar periodically by filling the blender jar with a sanitizer diluted to manufacture's specifications. Bleach, properly diluted, can be used.
- 2.** Add 1 teaspoon (5 ml) of liquid chlorine bleach.
- 3.** Stir for 10 seconds to mix water and bleach. Let mixture stand in blender jar for 5 minutes.
- 4.** Empty water/bleach mixture. Store jar as described in Sections 5.4 and 5.5

## **5.7 CLEANING OF BLENDER BASE**

- 1.** Make sure the main power switch is off and blender is unplugged before cleaning.
- 2.** When necessary, clean the metal top and sides of the blender base with a damp rag. Mild cleaners such as Windex® may be used.
- 3.** If needed, the drive socket can be cleaned using a cotton swab or toothpick.

## **5.8 CLEANING TIPS AND CAUTIONS**

Do not use abrasives to clean the blender base or jar, as this will dull or scratch the surface.

Do not use a water jet of any kind to clean this equipment.

**NEVER** submerge the blender base in water – **THIS WILL VOID WARRANTY**

Avoid submerging the blender jars for more than 5 minutes. Water penetration through the lower jar seals will reduce the jar life.

For long-term storage of jar, apply a small amount of food-grade oil (such as vegetable oil) to the seals around the blade assembly, both inside and outside of the blender jar.

## **SECTION 6: WARRANTY AND SERVICE PROCEDURE**

### **6.1 WARRANTY DESCRIPTION**

Blendtec warrants the ez Blender for 1 year (or 5,000 cycles domestically).

#### **JAR:**

The jar and internal bearing assembly are warrantied against failure for one year from purchase date.

#### **BLADES:**

The stainless steel blade is warrantied against breakage for the life of the jar. Please note that dulling of the blade may occur as a result of usage and does not affect blending effectiveness.

Warranties begin from date of shipment, or on date of purchase where proof of purchase is provided. Cosmetic damage and abuse are not included within this warranty.

### **6.2 SERVICE PROCEDURE**

Should you experience any difficulty in using your Blendtec blender, please do the following:

#### **UNDER WARRANTY**

1. Contact Blendtec customer service (for international service contact a Blendtec qualified service agent) immediately to diagnose the difficulty. Please have your serial number ready as well as a description of the problem. Do not attempt to do your own repairs. Repairs made by persons other than Blendtec authorized service representatives will void the warranty. Many issues can be resolved simply and quickly over the phone.

2. If the difficulty cannot be resolved over the phone, your blender base may require repair. If you are under warranty, Blendtec will repair your blender base at no cost. Cosmetic damage and abuse are not included.

**OUT OF WARRANTY**

1. Contact Blendtec customer service (for international service contact a Blendtec qualified service agent) to diagnose the difficulty. Please have your serial number ready along with a description of the problem. Many issues can be resolved simply and quickly over the phone.

**Attempting to do your own repairs will void the warranty of your machine.**

2. If you are not under warranty and wish to have your blender base repaired, box up your existing blender base and ship the unit to Blendtec (for international service contact a Blendtec qualified service agent). For international service your Blendtec service agent will bill you for services rendered.

When shipping your blender base for service, either in warranty or out of warranty, please include the following:

-----

Name:	
Company:	Store Number:
Address:	
Phone:	
Serial Number: <small>(Found on the underside of the motor)</small>	Cycle Count: <small>(Number on the LCD Screen)</small>
Purchase Date:	Place of Purchase:
Problem Description:	











1206 South 1680 West  
Orem, UT 84058  
801-222-0888  
[www.blendtec.com](http://www.blendtec.com)

**OWN-CE-002 Manual ez Blender v2 aug 10**